



XRGI[®]

**OPERATING INSTRUCTIONS
FOR THE CHIMNEY SWEEP**

STARTING/STOPPING THE SYSTEM



There is a risk of injury if all the prerequisites for safe operation are not met.

- All safety equipment and/or devices and protective measures must be available and functioning. Safety equipment and/or devices may not be removed, amended, modified or manipulated.
- Make sure that the XRGi® system is professionally wired and commissioned.

MANUAL START

- Inspect whether all the noise-abatement cladding has been professionally installed.
- Check whether any stop-cock in the supply line are open.
- Check whether the shut-off valves in the hot water supply pipe are open.
- Switch on the mains switch on the iQ-Control Panel.


When the XRGi® system is operating fully automatically, the control ensures a continuously optimised and economic supply to meet actual electricity and heat demand.

Switch on the XRGi® system as follows:

- Press any button on the user interface to activate the display
- Press **ESC** to enter the menu.
- Select **System start/stop** in the main menu
- Press **OK**

The following prompt appears:

- Press **OK** to switch on the XRGi® system.

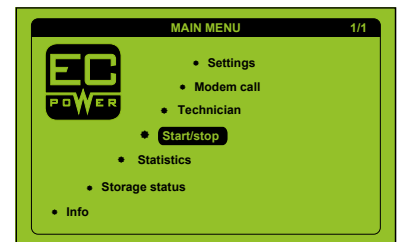

MANUAL STOP



Switch off the XRGi® system as follows:

- During active operation, press **ESC**

- Select **System start/stop** in the main menu
- Press **OK**

The following prompt appears:

- Press **OK** to switch off the XRGi® system.

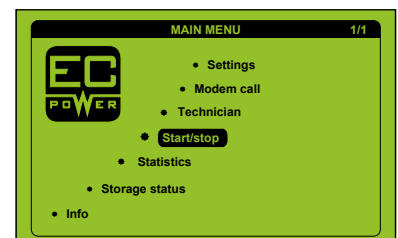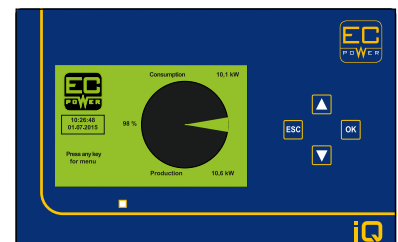



WWW.ECPOWER.EU

XRGI[®]

OPERATING INSTRUCTIONS
FOR THE CHIMNEY SWEEP